

TGP-803M Digitizer Pen User Manual

Before using the pen, please press the key or press the nib to open the power on, or press the nib to open the lower when the led light shows blue, the pen would continue working for 20 minutes, when press the key or nib again while using, the pen working time would extend 20 minutes.

开始使用笔之前，请按笔按键或点触笔尖以开启电源，当 LED 灯显示为蓝色的时候，笔会连续工作20分钟，若在使用过程中按一次按键或笔尖，笔的工作时间将会延长20 分钟。

When the Pen li-ion battery poor, the red led will lighting, the pen battery must recharge again immediately, during the pen battery charging, the red led light will continue show on, when the battery is full ,the red led will turn off .

当笔的锂电池电弱的时候，红色 LED 指示灯将会亮起，笔必须要尽快充电，充电期间，红色 LED 指示灯将会持续亮起，当电池充满的时候，红色指示灯将会熄灭

when the pen has inserted to the charger by correct direction; during the correct pen charging position, the red led would shows on.

当笔以正确的方向插入充电器的时候，红色 LED 指示灯将会亮起

When press the pen nib once or twice on the monitor, the function as same as the mouse right key function, when press the pen nib and moving on the monitor, the function as same as user press a nd moving the mouse right key on the monitor.

笔单击和双击的功能与鼠标左键单双击功能相同。按住笔尖在屏幕上移动的时候，与使用鼠标左键在屏幕上按住并移动功能相同。


When press the pen key on the monitor, the function as same as Esc of the keyboard.

当在屏幕上按下电磁笔身按键的时候，将会实现返回功能

After using a long period the pen nib may damage and not nicely in smooth writing ,then please change the spare pen nib by the iron nib clip.

使用较长时间后，笔尖将会有一定程度的磨损，此时应使用笔尖夹夹出旧笔尖，换上备用笔尖。


Replacing the Pen Nib/更换笔芯

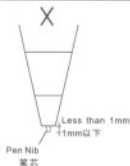

Replace the pen nib when it is worn down or its length is reduced to 1mm or less.


笔芯磨损时(1mm以下), 请如图所示更换笔芯。

Remove the pen nib
拉出笔芯

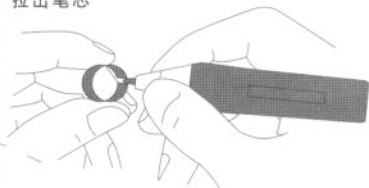

Use a pair of tweezers (or similar tool) to pull the nib out of the pen.
请使用笔芯夹将笔芯拉出。

Insert a new nib
插入新笔芯

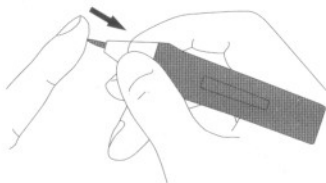

Insert the new nib, firmly pushing it in until it stops.
请确认将笔芯插到底。